FIBER

0.50 NA Step-Index Multimode Fibers

- Broad UV/VIS/NIR Spectral Range
- Biocompatible Materials
- Low Microbend Losses

Ø600 µm, Ø1000 µm, & Ø1500 µm Core Fiber

Ø400 µm Core Fiber

Ø200 µm Core Fiber

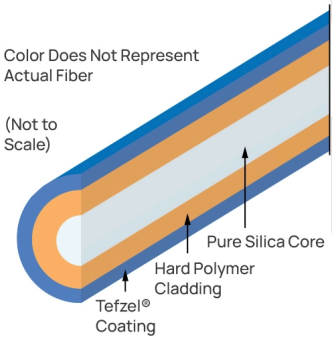

0.50 NA Step-Index Multimode Fiber Cross Section

Related Items

MM SMA-SMA Patch Cables

Furcation Tubing



Custom Patch Cables in 24 Hours

Bare Fiber Terminator

We use third-party services that help us optimize our website to improve our user experience. We require your consent. By clicking Accept all cookies, you agree to the storage of cookies on your browser and the transmission of your data to third parties. You can find more information by clicking Cookies Settings, as well as under our Privacy Policy.

Cookies Settings

Accept Necessary Cookies Only

Accept All Cookies

Overview

Features

- Broad UV/VIS/NIR Spectral Range:
  - 300 to 1200 nm (High OH)
  - 400 to 2200 nm (Low OH)
- Reduced Static Fatigue, Low Microbend Losses
- Biocompatible Materials, Radiation Resistant
- Can be Sterilized by Ethylene Oxide Cleaning Method

Our 0.50 NA polymer-clad fibers offer high numerical apertures to suit a broad range of applications, from remote illumination to photodynamic therapy. The fiber is encased in a Tefzel® coating that has an operating temperature range of -40 to 85 °C.

Thorlabs also offers SMA-terminated patch cables with low-OH 0.50 NA multimode fibers. If you require another connector type, we offer the ADAFCSMA1 FC/PC-to-SMA Mating Sleeve that can be used to couple an SMA connector to an FC/PC connector, as well as hybrid patch cables. Please contact Tech Support for further information.

0.50 NA Fiber Connectors

As seen in Figure 1.1, Thorlabs uses a unique method to terminate 0.50 NA fibers. The Tefzel buffer is stripped back a bit further to allow more of the cladding to be exposed to the adhesive, improving the bonding between the fiber and the connector. Thorlabs also offers pre-assembled SMA-to-SMA patch cables using the low-OH fibers on this page. Custom patch cables are also available. Please click on the the *Custom Fiber Patch Cables* link below for more information.

0.50 NA multimode fibers are available from stock as Fiber Optic Patch Cables in many configurations. Click on the *More [+]* link in Table 1.2 to view stock patch cable options. Custom cables are also available. Click on the *Custom Fiber Patch Cables* link to the right for more information.

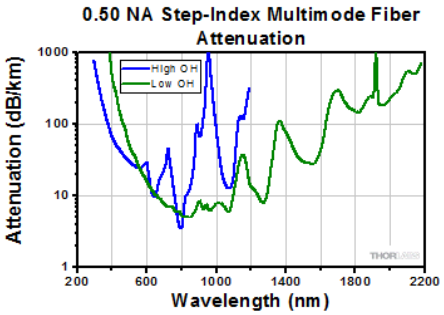

Click Here for Raw Data

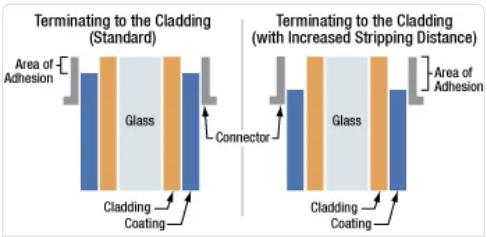

Figure 1.1 Illustration of 0.50 NA Fiber Termination

Alternate Numerical Aperture Step-Index Fibers			
0.1 NA Small-Core Fibers	0.22 NA High- and Low-OH Fibers	0.39 NA High- and Low-OH Fibers	0.50 NA High- and Low-OH Fibers

Table 1.2 Stock Patch Cables Available with These Fibers

Item #	Fiber Used	Description	Length
M129	FP200URT	FC/PC to SMA905	1 or 2 m

We use third-party services that help us optimize our website to improve our user experience. We require your consent. By clicking Accept all cookies, you agree to the storage of cookies on your browser and the transmission of your data to third parties. You can find more information by clicking Cookies Settings, as well as under our Privacy Policy.

M106		SMA905 to FC Ferrule	1 m
M44	FP200ERT	SMA905 to SMA905	1 or 2 m
M123		FC/PC to FC/PC	1 or 2 m
M131	FP400URT	FC/PC to SMA905	1 or 2 m
M127		FC/PC to LC Ferrule	1 m
M128		FC/PC to FC Ferrule	1 m
MAF1L1[a]		FC/PC to FC/PC	1 m
MAF2L1[a]		FC/PC to LC Ferrule	1 m
MAF3L1[a]		FC/PC to FC Ferrule	1 m
M125		SMA905 to LC Ferrule	1 m
M126		SMA905 to FC Ferrule	1 m
M45	FP400ERT	SMA905 to SMA905	1 or 2 m
M124		FC/PC to FC/PC	1 or 2 m
M134	FP600URT	FC/PC to SMA905	1 or 2 m
M53	FP600ERT	SMA905 to SMA905	1 or 2 m
M59	FP1000ERT	SMA905 to SMA905	1 or 2 m
M107	FP1500ERT	SMA905 to SMA905	1 or 2 m

a. Low-Autoflourescence Patch Cables

We use third-party services that help us optimize our website to improve our user experience. We require your consent. By clicking Accept all cookies, you agree to the storage of cookies on your browser and the transmission of your data to third parties. You can find more information by clicking Cookies Settings, as well as under our Privacy Policy.

Specs

Item #	Wavelength Range	Hydroxyl Content	Core Diameter	Cladding Diameter	Coating Diameter	Core / Cladding	Coating	Proof Test
FP200URT	300 - 1200 nm	High OH	200 ± 5 µm	225 ± 5 µm	500 ± 30 µm	Pure Silica / Hard Polymer	Tefzel	≥100 kpsi
FP200ERT	400 - 2200 nm	Low OH						
FP400URT	300 - 1200 nm	High OH	400 ± 8 µm	425 ± 10 µm	730 ± 30 µm			
FP400ERT	400 - 2200 nm	Low OH						
FP600URT	300 - 1200 nm	High OH	600 ± 10 µm	630 ± 10 µm	1040 ± 30 µm			
FP600ERT	400 - 2200 nm	Low OH						
FP1000URT	300 - 1200 nm	High OH	1000 ± 15 µm	1035 ± 15 µm	1400 ± 50 µm			
FP1000ERT	400 - 2200 nm	Low OH						
FP1500URT	300 - 1200 nm	High OH	1500 ± 30 µm	1550 ± 31 µm	2000 ± 100 µm			
FP1500ERT	400 - 2200 nm	Low OH						

Item #	NA	Core Index @ 589.3 nm	Clad Index @ 589.3 nm	Maximum Attenuation @ 810 nm	Max Core Offset	Bend Radius		Operating Temperature (Tefzel Coating)	Stripping Tool
						Short Term	Long Term		
FP200URT	0.50	1.458434	1.3651	12 dB/km	5 µm	21 mm	42 mm	-40 to 85 °C	T12S21
FP200ERT		1.458965	1.3651						
FP400URT		1.458434	1.3651		7 µm	43 mm	86 mm		T21S31
FP400ERT		1.458965	1.3651						
FP600URT		1.458434	1.3651		9 µm	48 mm	96 mm		T28S46
FP600ERT		1.458965	1.3651						
FP1000URT		1.458434	1.3651		10 µm	69 mm	138 mm		M44S63
FP1000ERT		1.458965	1.3651						
FP1500URT		1.458434	1.3651		12 µm	79 mm	158 mm		M63S86
FP1500ERT		1.458965	1.3651						

We use third-party services that help us optimize our website to improve our user experience. We require your consent. By clicking Accept all cookies, you agree to the storage of cookies on your browser and the transmission of your data to third parties. You can find more information by clicking Cookies Settings, as well as under our Privacy Policy.

MM Fiber Tutorial

Guiding Light in an Optical Fiber

Optical fibers are part of a broader class of optical components known as waveguides that utilize total internal reflection (TIR) in order to confine and guide light within a solid or liquid structure. Optical fibers, in particular, are used in numerous applications; common examples include telecommunications, spectroscopy, illumination, and sensors.

Figure 79A Total Internal Reflection in an Optical Fiber

One of the more common glass (silica) optical fibers uses a structure known as a step-index fiber, which is shown in Figure 79A. Step-index fibers have an inner core made from a material with a refractive index that is higher than the surrounding cladding layer. Within the fiber, a critical angle of incidence exists such that light will reflect off the core/cladding interface rather than refract into the surrounding medium. To fulfill the conditions for TIR in the fiber, the angle of incidence of light launched into the fiber must be less than a certain angle, which is defined as the acceptance angle, θ_{acc}. Snell's law can be used to calculate this angle:

where n_{core} is the refractive index of the fiber core, n_{clad} is the refractive index of the fiber cladding, n is the refractive index of the outside medium, θ_{crit} is the critical angle, and θ_{acc} is the acceptance half-angle of the fiber. The numerical aperture (NA) is a dimensionless quantity used by fiber manufacturers to specify the acceptance angle of an optical fiber and is defined as:

In step-index fibers with a large core (multimode), the NA can be calculated directly using this equation. The NA can also be determined experimentally by tracing the far-field beam profile and measuring the angle between the center of the beam and the point at which the beam intensity is 5% of the maximum; however, calculating the NA directly provides the most accurate value.

Number of Modes in an Optical Fiber

Each potential path that light propagates through in an optical fiber is known as a guided mode of the fiber. Depending on the physical dimensions of the core/cladding regions, refractive index, and wavelength, anything from one to thousands of modes can be supported within a single optical fiber. The two most commonly manufactured variants are single mode fiber (which supports a single guided mode) and multimode fiber (which supports a large number of guided modes). In a multimode fiber, lower-order modes tend to confine light spatially in the core of the fiber; higher-order modes, on the other hand, tend to confine light spatially near the core/cladding interface.

Using a few simple calculations, it is possible to estimate the number of modes (single mode or multimode) supported by an optical fiber. The normalized optical frequency, also known as the V-number, is a dimensionless quantity that is proportional to the free space optical frequency but is normalized to guiding properties of an optical fiber. The V-number is defined as:

We use third-party services that help us optimize our website to improve our user experience. We require your consent. By clicking Accept all cookies, you agree to the storage of cookies on your browser and the transmission of your data to third parties. You can find more information by clicking Cookies Settings, as well as under our Privacy Policy.

Single mode fibers are defined with a V-number cut-off of V < 2.405, which represents the point at which light is coupled only into the fiber's fundamental mode. To meet this condition, a single mode fiber has a much smaller core size and NA compared to a multimode fiber at the same wavelength. One example of this, SMF-28 Ultra single mode fiber, has a nominal NA of 0.14 and an Ø8.2 µm core at 1550 nm, which results in a V-number of 2.404.

Sources of Attenuation

Loss within an optical fiber, also referred to as attenuation, is characterized and quantified in order to predict the total transmitted power lost within a fiber optic setup. The sources of these losses are typically wavelength dependent and range from the material used in the fiber itself to bending of the fiber. Common sources of attenuation are detailed below:

Figure 79B Attenuation Due to Macrobend Loss

Figure 79C Attenuation Due to Microbend Loss

Figure 79D Beam profile measurement of FT200EMT multimode fiber and a previous-generation M565F1 LED (replaced by the M565F3) showing light guided in the cladding rather than the core of the fiber.

Absorption

Because light in a standard optical fiber is guided via a solid material, there are losses due to absorption as light propagates through the fiber. Standard fibers are manufactured using fused silica and are optimized for transmission from 1300 nm to 1550 nm. At longer wavelengths (>2000 nm), multi-phonon interactions in fused silica cause significant absorption. Fluoride glasses such as $ZrF_4$and InF_3 are used in manufacturing Mid-IR optical fibers primarily because they exhibit lower loss at these wavelengths. ZrF_4 and InF_3 fibers have a multi-phonon edge of ~3.6 µm and ~4.6 µm, respectively.

Contaminants in the fiber also contribute to the absorption loss. One example of an undesired impurity is water molecules that are trapped in the glass of the optical fiber, which will absorb light around 1300 nm and 2.94 µm. Since telecom signals and some lasers operate in that same region, any water molecules present in the fiber will attenuate the signal significantly.

The concentration of ions in the fiber glass is often controlled by manufacturers to tune the transmission/attenuation properties of a fiber. For example, hydroxyl ions (OH-) are naturally present in silica and absorb light in the NIR-IR spectrum. Therefore, fibers with low-OH content are preferred for transmission at telecom wavelengths. On the other hand, fibers with high-OH content typically exhibit increased transmission at UV wavelengths and thus may be preferred by users interested in applications such as fluorescence or UV-VIS spectroscopy.

Scattering

For the majority of fiber optics applications, light scattering is a source of loss that occurs when light encounters a change in the refractive index of the medium. These changes can be extrinsic, caused by impurities, particulates, or bubbles; or intrinsic, caused by fluctuations in the glass density, composition, or phase state. Scattering is inversely related to the wavelength of light, so scattering loss becomes significant at shorter wavelengths such as the UV or blue regions of the spectrum. Using proper fiber cleaning, handling, and storage procedures may minimize the presence of impurities on tips of fibers that cause large scattering losses.

Bending Loss

Losses that occur due to changes in the external and internal geometry of an optical fiber are known as bending loss. These are usually separated into two categories: macrobending loss and microbending loss.

Macrobend loss is typically associated with the physical bending of an optical fiber; for example, rolling it in a tight coil. As shown in Figure 79D, guided light is spatially distributed within the core and cladding regions of the fiber. When a fiber is bent at a radius, light near the outer radius of the bend cannot maintain the same spatial mode profile without exceeding the speed of light. Instead, the energy is lost to the surroundings as radiation. For a large bend radius, the losses associated with bending are small; however, at bend radii smaller than the recommended bend radius of a fiber, bend losses become very significant. For short periods of time, optical fibers can be operated at a small bend radius; however, for long-term storage, the bend radius should be larger than the recommended value. Use

We use third-party services that help us optimize our website to improve our user experience. We require your consent. By clicking Accept all cookies, you agree to the storage of cookies on your browser and the transmission of your data to third parties. You can find more information by clicking Cookies Settings, as well as under our Privacy Policy.

higher intensity in the cladding than in the core of the fiber. These modes can be non-propagating (i.e., they do not fulfill the conditions for TIR) or they can propagate over a significant length of fiber. Because cladding modes are typically higher-order, they are a source of loss in the presence of fiber bending and microbending defects. Cladding modes are also lost when connecting two fibers via connectors as they cannot be easily coupled between optical fibers.

Cladding modes may be undesired for some applications (e.g., launching into free space) because of their effect on the beam spatial profile. Over long fiber lengths, these modes will naturally attenuate. For short fiber lengths (<10 m), one method for removing cladding modes from a fiber is to use a mandrel wrap at a radius that removes cladding modes while keeping the desired propagating modes.

Launch Conditions

Underfilled Launch Condition

For a large multimode fiber which accepts light over a wide NA, the condition of the light (e.g., source type, beam diameter, NA) coupled into the fiber can have a significant effect on performance. An underfilled launch condition occurs when the beam diameter and NA of light at the coupling interface are smaller than the core diameter and NA of the fiber. A common example of this is launching a laser source into a large multimode fiber. As seen in Figure 79E, underfilled launches tend to concentrate light spatially in the center of the fiber, filling lower-order modes preferentially over higher-order modes. As a result, they are less sensitive to macrobend losses and do not have cladding modes. The measured insertion loss for an underfilled launch tends to be lower than typical, with a higher power density in the core of the fiber.

Figure 79E This diagram illustrates an underfilled launch condition (a) and a beam profile measurement using a FT200EMT multimode fiber (b).

Overfilled Launch Condition

Overfilled launches are defined by situations where the beam diameter and NA at the coupling interface are larger than the core diameter and NA of the fiber. One method to achieve this is by launching light from an LED source into a small multimode fiber. An overfilled launch completely exposes the fiber core and some of the cladding to light, enabling the filling of lower- and higher-order modes equally (as seen in Figure 79F) and increasing the likelihood of coupling into cladding modes of the fiber. This increased percentage of higher-order modes means that overfilled fibers are more sensitive to bending loss. The measured insertion loss for an overfilled launch tends to be higher than typical, but results in an overall higher output power compared to an underfilled fiber launch.

Figure 79F This diagram illustrates an overfilled launch condition (a) and a beam profile measurement using a FT200EMT multimode fiber (b).

There are advantages and disadvantages to underfilled or overfilled launch conditions, depending on the needs of the intended application. For measuring the baseline performance of a multimode fiber, Thorlabs recommends using a launch condition where the beam diameter is 70 - 80% of the fiber core diameter. Over short distances, an overfilled fiber has more output power; however, over long distances (>10 - 20 m) the higher-order modes that more susceptible to attenuation will disappear.

We use third-party services that help us optimize our website to improve our user experience. We require your consent. By clicking Accept all cookies, you agree to the storage of cookies on your browser and the transmission of your data to third parties. You can find more information by clicking Cookies Settings, as well as under our Privacy Policy.

Damage Threshold

Laser-Induced Damage in Silica Optical Fibers

The following tutorial details damage mechanisms relevant to unterminated (bare) fiber, terminated optical fiber, and other fiber components from laser light sources. These mechanisms include damage that occurs at the air / glass interface (when free-space coupling or when using connectors) and in the optical fiber itself. A fiber component, such as a bare fiber, patch cable, or fused coupler, may have multiple potential avenues for damage (e.g., connectors, fiber end faces, and the device itself). The maximum power that a fiber can handle will always be limited by the lowest limit of any of these damage mechanisms.

Quick Links

Damage at the Air / Glass Interface

Intrinsic Damage Threshold

Preparation and Handling of Optical Fibers

While the damage threshold can be estimated using scaling relations and general rules, absolute damage thresholds in optical fibers are very application dependent and user specific. Users can use this guide to estimate a safe power level that minimizes the risk of damage. Following all appropriate preparation and handling guidelines, users should be able to operate a fiber component up to the specified maximum power level; if no maximum is specified for a component, users should abide by the "practical safe level" described below for safe operation of the component. Factors that can reduce power handling and cause damage to a fiber component include, but are not limited to, misalignment during fiber coupling, contamination of the fiber end face, or imperfections in the fiber itself. For further discussion about an optical fiber's power handling abilities for a specific application, please contact Thorlabs' Tech Support.

Damage at the Air / Glass Interface

There are several potential damage mechanisms that can occur at the air / glass interface. Light is incident on this interface when free-space coupling or when two fibers are mated using optical connectors. High-intensity light can damage the end face leading to reduced power handling and permanent damage to the fiber. For fibers terminated with optical connectors where the connectors are fixed to the fiber ends using epoxy, the heat generated by high-intensity light can burn the epoxy and leave residues on the fiber facet directly in the beam path.

Figure 36A
Damaged Fiber End

Figure 36B
Undamaged Fiber End

Damage Mechanisms on the Bare Fiber End Face

Damage mechanisms on a fiber end face can be modeled similarly to bulk optics, and industry-standard damage thresholds for UV Fused Silica substrates can be applied to silica-based fiber. However, unlike bulk optics, the relevant surface areas and beam diameters involved at the air / glass interface of an optical fiber are very small, particularly for coupling into single mode (SM) fiber. Therefore, for a given power density, the power incident on the fiber needs to be lower for a smaller beam diameter.

Table 36C lists two thresholds for optical power densities: a theoretical damage threshold and a "practical safe level". In general, the theoretical damage threshold represents the estimated maximum power density that can be incident on the fiber end face without risking damage with very good fiber end face and coupling conditions. The "practical safe level" power density represents minimal risk of fiber damage. Operating a fiber or component beyond the practical safe level is possible, but users must follow the appropriate handling instructions and verify performance at low

Table 36C Estimated Optical Power Densities on Air / Glass Interface[a]

Type	Theoretical Damage Threshold[b]	Practical Safe Level[c]
CW (Average Power)	~1 MW/cm^2	~250 kW/cm^2
10 ns Pulsed (Peak Power)	~5 GW/cm^2	~1 GW/cm^2

a. All values are specified for unterminated (bare), undoped silica fiber and apply for free space coupling into a clean fiber end face.

b. This is an estimated maximum power density that can be

We use third-party services that help us optimize our website to improve our user experience. We require your consent. By clicking Accept all cookies, you agree to the storage of cookies on your browser and the transmission of your data to third parties. You can find more information by clicking Cookies Settings, as well as under our Privacy Policy.

SM400 Fiber: Area = Pi x $(MFD/2)^2$ = Pi x $(1.5\ \mu m)^2$ = 7.07 μm^2= 7.07 x 10^{-8} cm^2

SMF-28 Ultra Fiber: Area = Pi x $(MFD/2)^2$ = Pi x $(5.25\ \mu m)^2$ = 86.6 μm^2= 8.66 x 10^{-7} cm^2

To estimate the power level that a fiber facet can handle, the power density is multiplied by the effective area. Please note that this calculation assumes a uniform intensity profile, but most laser beams exhibit a Gaussian-like shape within single mode fiber, resulting in a higher power density at the center of the beam compared to the edges. Therefore, these calculations will slightly overestimate the power corresponding to the damage threshold or the practical safe level. Using the estimated power densities assuming a CW light source, we can determine the corresponding power levels as:

SM400 Fiber: 7.07 x 10^{-8} cm^2 x 1 MW/cm^2 = 7.1 x 10^{-8} MW = 71 mW (Theoretical Damage Threshold)
7.07 x 10^{-8} cm^2 x 250 kW/cm^2 = 1.8 x 10^{-5} kW = 18 mW (Practical Safe Level)

SMF-28 Ultra Fiber: 8.66 x 10^{-7} cm^2 x 1 MW/cm^2 = 8.7 x 10^{-7} MW = 870 mW (Theoretical Damage Threshold)
8.66 x 10^{-7} cm^2 x 250 kW/cm^2 = 2.1 x 10^{-4} kW = 210 mW (Practical Safe Level)

Effective Area of Multimode Fibers
The effective area of a multimode (MM) fiber is defined by the core diameter, which is typically far larger than the MFD of an SM fiber. For optimal coupling, Thorlabs recommends focusing a beam to a spot roughly 70 - 80% of the core diameter. The larger effective area of MM fibers lowers the power density on the fiber end face, allowing higher optical powers (typically on the order of kilowatts) to be coupled into multimode fiber without damage.

Damage Mechanisms Related to Ferrule / Connector Termination

Fibers terminated with optical connectors have additional power handling considerations. Fiber is typically terminated using epoxy to bond the fiber to a ceramic or steel ferrule. When light is coupled into the fiber through a connector, light that does not enter the core and propagate down the fiber is scattered into the outer layers of the fiber, into the ferrule, and the epoxy used to hold the fiber in the ferrule. If the light is intense enough, it can burn the epoxy, causing it to vaporize and deposit a residue on the face of the connector. This results in localized absorption sites on the fiber end face that reduce coupling efficiency and increase scattering, causing further damage.

Figure 36D Plot showing approximate input power that can be incident on a single mode silica optical fiber with a termination. Each line shows the estimated power level due to a specific damage mechanism. The maximum power handling is limited by the lowest power level from all relevant damage mechanisms (indicated by a solid line).

For several reasons, epoxy-related damage is dependent on the wavelength. In general, light scatters more strongly at short wavelengths than at longer wavelengths. Misalignment when coupling is also more likely due to the small MFD of short-wavelength SM fiber that also produces more scattered light.

To minimize the risk of burning the epoxy, fiber connectors can be constructed to have an epoxy-free air gap between the optical fiber and ferrule near the fiber end face. Our high-power multimode fiber patch cables use connectors with this design feature.

Determining Power Handling with Multiple Damage Mechanisms

When fiber cables or components have multiple avenues for damage (e.g., fiber patch cables), the maximum power handling is always limited by the lowest damage threshold that is relevant to the fiber component. In general, this represents the highest input power that can be incident on the patch cable end face and not the coupled output power.

As an illustrative example, Figure 36D shows an estimate of the power handling limitations of a single mode fiber patch cable due to damage to the fiber end face and damage via an optical connector. The total input power handling of a terminated fiber at a given wavelength is limited by the lower of the two limitations at any given wavelength (indicated by the solid lines). A single mode fiber operating at around 488 nm is primarily limited by damage to the fiber end face (blue solid line), but fibers operating at 1550 nm are

We use third-party services that help us optimize our website to improve our user experience. We require your consent. By clicking Accept all cookies, you agree to the storage of cookies on your browser and the transmission of your data to third parties. You can find more information by clicking Cookies Settings, as well as under our Privacy Policy.

Intrinsic Damage Threshold

In addition to damage mechanisms at the air/ glass interface, optical fibers also display power handling limitations due to damage mechanisms within the optical fiber itself. These limitations will affect all fiber components as they are intrinsic to the fiber itself. Two categories of damage within the fiber are damage from bend losses and damage from photodarkening.

Bend Losses
Bend losses occur when a fiber is bent to a point where light traveling in the core is incident on the core/cladding interface at an angle higher than the critical angle, making total internal reflection impossible. Under these circumstances, light escapes the fiber, often in a localized area. The light escaping the fiber typically has a high power density, which burns the fiber coating as well as any surrounding furcation tubing.

A special category of optical fiber, called double-clad fiber, can reduce the risk of bend-loss damage by allowing the fiber's cladding (2nd layer) to also function as a waveguide in addition to the core. By making the critical angle of the cladding/coating interface higher than the critical angle of the core/clad interface, light that escapes the core is loosely confined within the cladding. It will then leak out over a distance of centimeters or meters instead of at one localized spot within the fiber, minimizing the risk of damage. Thorlabs manufactures and sells 0.22 NA double-clad multimode fiber, which boasts very high, megawatt range power handling.

Photodarkening
A second damage mechanism, called photodarkening or solarization, can occur in fibers used with ultraviolet or short-wavelength visible light, particularly those with germanium-doped cores. Fibers used at these wavelengths will experience increased attenuation over time. The mechanism that causes photodarkening is largely unknown, but several fiber designs have been developed to mitigate it. For example, fibers with a very low hydroxyl ion (OH) content have been found to resist photodarkening and using other dopants, such as fluorine, can also reduce photodarkening.

Even with the above strategies in place, all fibers eventually experience photodarkening when used with UV or short-wavelength light, and thus, fibers used at these wavelengths should be considered consumables.

Preparation and Handling of Optical Fibers

General Cleaning and Operation Guidelines
These general cleaning and operation guidelines are recommended for all fiber optic products. Users should still follow specific guidelines for an individual product as outlined in the support documentation or manual. Damage threshold calculations only apply when all appropriate cleaning and handling procedures are followed.

1. All light sources should be turned off prior to installing or integrating optical fibers (terminated or bare). This ensures that focused beams of light are not incident on fragile parts of the connector or fiber, which can possibly cause damage.
2. The power-handling capability of an optical fiber is directly linked to the quality of the fiber/connector end face. Always inspect the fiber end prior to connecting the fiber to an optical system. The fiber end face should be clean and clear of dirt and other contaminants that can cause scattering of coupled light. Bare fiber should be cleaved prior to use and users should inspect the fiber end to ensure a good quality cleave is achieved.
3. If an optical fiber is to be spliced into the optical system, users should first verify that the splice is of good quality at a low optical power prior to high-power use. Poor splice quality may increase light scattering at the splice interface, which can be a source of fiber damage.
4. Users should use low power when aligning the system and optimizing coupling; this minimizes exposure of other parts of the fiber (other than the core) to light. Damage from scattered light can occur if a high power beam is focused on the cladding, coating, or connector.

Tips for Using Fiber at Higher Optical Power

We use third-party services that help us optimize our website to improve our user experience. We require your consent. By clicking Accept all cookies, you agree to the storage of cookies on your browser and the transmission of your data to third parties. You can find more information by clicking Cookies Settings, as well as under our Privacy Policy.

3. Bend losses that result from sharply bending a fiber can cause light to leak from the fiber in the stressed area. When operating at high power, the localized heating that can occur when a large amount of light escapes a small localized area (the stressed region) can damage the fiber. Avoid disturbing or accidently bending fibers during operation to minimize bend losses.
4. Users should always choose the appropriate optical fiber for a given application. For example, large-mode-area fibers are a good alternative to standard single mode fibers in high-power applications as they provide good beam quality with a larger MFD, decreasing the power density on the air/fiber interface.
5. Step-index silica single mode fibers are normally not used for ultraviolet light or high-peak-power pulsed applications due to the high spatial power densities associated with these applications.

We use third-party services that help us optimize our website to improve our user experience. We require your consent. By clicking Accept all cookies, you agree to the storage of cookies on your browser and the transmission of your data to third parties. You can find more information by clicking Cookies Settings, as well as under our Privacy Policy.

Lab Facts

Thorlabs Lab Facts: Modifying Beam Profiles with Multimode Fibers

We present laboratory measurements demonstrating how the output beam profile from multimode fiber can be affected by the beam entry angle. In some applications, an alternative beam distribution such as a top hat or donut is desired instead of the inherent Gaussian distribution provided by typical optics. Here we investigated the effect of changing the input angle of a focused laser beam into a multimode fiber patch cable. Focusing the light normal to the fiber face produced a near-Gaussian output beam profile (Figure 169A) and increasing the angle resulted in top hat (Figure 169B) and donut-shaped (Figure 169C) beam profiles. These results demonstrate how multimode fibers can be used to change the shape of a beam profile.

For our experiment, we used an M38L01 Ø200 µm, 0.39 NA, Step-Index Fiber Patch Cable (Bare Fiber Item # FT200EMT) as the test fiber into which we launched the focused laser beam. The input light was set incident at 0°, 11°, and 15° to the input face of the multimode fiber to create the initial, top hat, and donut profiles, respectively. Each time the angle was changed, the alignment of the input fiber was optimized while the output power was monitored with a power meter to ensure maximum coupling was achieved. Images were then acquired with a 9 second exposure and the shape of the beam profile was evaluated. Note that during the exposure, a 1500 grit diffuser was manually rotated between the coupling optics (before the fiber under test) to reduce the spatial coherence and create a clean output beam profile.

Assuming a ray tracing model, there are two general types of rays that propagate along a multimode fiber: (a) meridional rays, which pass through the central axis of the fiber after each reflection, and (b) skew rays, which never pass through the central axis of the fiber. Figures 169A through 169F illustrate the three basic ray propagation scenarios observed during the experiment. Figures 169D and 169F depict meridional and skew ray propagation through multimode fiber, respectively, and the associated theoretical beam distribution at the fiber output. As illustrated in Figure 169F, skew rays propagate in a helical path along the fiber that is tangent to the inner caustic of the path with radius *r*. Figure 169E depicts the beam propagation and beam distribution from a combination of meridional and skew rays. By changing the input angle of the light launched into a multimode fiber, we were able to modify the proportion of light rays propagating as meridional rays vs. skew rays, and consequently, modify the output from a near-Gaussian distribution (primarily meridional rays, see Figure 169A) to a top hat (mixture of meridional and skew rays, see Figure 169B) to a donut (primarily skew rays, see Figure 169C). The beam profiles shown in Figures 169A through 169C were obtained at a distance of 5 mm from the fiber end face. These results demonstrate the ability to use a standard multimode fiber patch cable as a relatively inexpensive method to modify an input Gaussian profile into a top hat and donut profile with minimal loss. For details on the experimental setup employed and these summarized results, please click here.

Figure 169A Near-Gaussian Beam Profile Obtained at 0° Input Angle (Normal to Fiber Face)

Figure 169B Top Hat Beam Profile Obtained at 11° Input Angle

We use third-party services that help us optimize our website to improve our user experience. We require your consent. By clicking Accept all cookies, you agree to the storage of cookies on your browser and the transmission of your data to third parties. You can find more information by clicking Cookies Settings, as well as under our Privacy Policy.

Figure 169E Meridional and Skew Ray Propagation Corresponding to Top Hat Profile

Figure 169F Skew Ray Propagation Corresponding to Donut Profile

We use third-party services that help us optimize our website to improve our user experience. We require your consent. By clicking Accept all cookies, you agree to the storage of cookies on your browser and the transmission of your data to third parties. You can find more information by clicking Cookies Settings, as well as under our Privacy Policy.

MM Fiber Selection

Thorlabs offers multimode bare optical fiber with silica, zirconium fluoride (ZrF_4), or indium fluoride (InF_3) cores. The table below details all of Thorlabs' multimode bare optical fiber offerings. Attenuation plots can be found by clicking the graph icons in the column to the right.

Index Profile	NA	Fiber Type	Item #	Core Size	Wavelength Range	Attenuation (Click for Graph)
Step Index	0.100	Enhanced Coating View These Fibers	FG010LDA	Ø10 µm	400 to 550 nm and 700 to 1000 nm	
			FG025LJA	Ø25 µm	400 to 550 nm and 700 to 1400 nm	
			FG105LVA	Ø105 µm	400 to 2100 nm (Low OH)	
	0.22	Standard Glass-Clad Silica View These Fibers	FG050UGA	Ø50 µm	250 to 1200 nm (High OH)	
			FG105UCA	Ø105 µm		
			FG200UEA	Ø200 µm		
			FG400UEA	Ø400 µm		
			FG600UEA	Ø600 µm		
			FG1000UEA	Ø1000 µm		
			FG050LGA	Ø50 µm	400 to 2400 nm (Low OH)	
			FG105LCA	Ø105 µm		
			FG200LEA	Ø200 µm		
			FG400LEA	Ø400 µm		
			FG600LEA	Ø600 µm		
			FG1000LEA	Ø1000 µm		
			FG100UEP	Ø100 µm	250 to 1200 nm (High OH)	
			FG200UEP	Ø200 µm		

We use third-party services that help us optimize our website to improve our user experience. We require your consent. By clicking Accept all cookies, you agree to the storage of cookies on your browser and the transmission of your data to third parties. You can find more information by clicking Cookies Settings, as well as under our Privacy Policy.

Index Profile	NA	Fiber Type	Item #	Core Size	Wavelength Range	Attenuation (Click for Graph)
		View These Fibers	FG200AEA	Ø200 µm		
			FG300AEA	Ø300 µm		
			FG400AEA	Ø400 µm		
			FG600AEA	Ø600 µm		
			FG1000AEA	Ø1000 µm		
			UM22-100	Ø100 µm	180 to 850 nm Polyimide Coating for Use up to 300 °C	
			UM22-200	Ø200 µm		
			UM22-300	Ø300 µm		
			UM22-400	Ø400 µm		
			UM22-600	Ø600 µm		
		High Power Double Clad View These Fibers	FG105UCE	Ø105 µm	250 to 1200 nm (High OH)	
			FG200UCC	Ø200 µm		
			FG273UEC	Ø273 µm		
			FG365UEC	Ø365 µm		
			FG550UEC	Ø550 µm		
			FG910UEC	Ø910 µm		
			FG105LCE	Ø105 µm	400 to 2200 nm (Low OH)	
			FG200LCC	Ø200 µm		
			FG273LEC	Ø273 µm		
			FG365LEC	Ø365 µm		
			FG550LEC	Ø550 µm		

We use third-party services that help us optimize our website to improve our user experience. We require your consent. By clicking Accept all cookies, you agree to the storage of cookies on your browser and the transmission of your data to third parties. You can find more information by clicking Cookies Settings, as well as under our Privacy Policy.

Index Profile	NA	Fiber Type	Item #	Core Size	Wavelength Range	Attenuation (Click for Graph)
			FT1000UMT	Ø1000 µm		
			FT1500UMT	Ø1500 µm		
			FT200EMT	Ø200 µm	400 to 2200 nm (Low OH)	
			FT300EMT	Ø300 µm		
			FT400EMT	Ø400 µm		
			FT600EMT	Ø600 µm		
			FT800EMT	Ø800 µm		
			FT1000EMT	Ø1000 µm		
			FT1500EMT	Ø1500 µm		
	0.50	Hard Polymer Cladding View These Fibers	FP200URT	Ø200 µm	300 to 1200 nm (High OH)	
			FP400URT	Ø400 µm		
			FP600URT	Ø600 µm		
			FP1000URT	Ø1000 µm		
			FP1500URT	Ø1500 µm		
			FP200ERT	Ø200 µm	400 to 2200 nm (Low OH)	
			FP400ERT	Ø400 µm		
			FP600ERT	Ø600 µm		
			FP1000ERT	Ø1000 µm		
			FP1500ERT	Ø1500 µm		
	0.20	Zirconium Fluoride (ZrF_4) Core for Mid-IR View These Fibers		Various Sizes Between Ø100 µm and Ø600 µm	285 nm to 4.5 µm	
		Indium Fluoride (InF_3) Core for				

We use third-party services that help us optimize our website to improve our user experience. We require your consent. By clicking Accept all cookies, you agree to the storage of cookies on your browser and the transmission of your data to third parties. You can find more information by clicking Cookies Settings, as well as under our Privacy Policy.

Ø200 µm Core Step-Index Multimode Fiber, 0.50 NA

Item #	Wavelength Range	Hydroxyl Content	NA	Core Index @ 589.3 nm	Clad Index @ 589.3 nm	Core Diameter	Cladding Diameter	Coating Diameter	Core / Cladding	Coating	Stripping Tool
FP200URT	300 - 1200 nm	High OH	0.50	1.458434	1.3651	200 ± 5 µm	225 ± 5 µm	500 ± 30 µm	Pure Silica / Hard Polymer	Tefzel	T12S21
FP200ERT	400 - 2200 nm	Low OH		1.458965	1.3651						

Universal (2 Items) Items Ship from Bergkirchen, Germany

Item		Docs	Available	Price	Qty
FP200URT	0.50 NA, Ø200 µm Core Multimode Fiber, High OH		Today	1,91 € / Meter	1
FP200ERT	0.50 NA, Ø200 µm Core Multimode Fiber, Low OH		Today	2,13 € / Meter	1

We use third-party services that help us optimize our website to improve our user experience. We require your consent. By clicking Accept all cookies, you agree to the storage of cookies on your browser and the transmission of your data to third parties. You can find more information by clicking Cookies Settings, as well as under our Privacy Policy.

Ø400 µm Core Step-Index Multimode Fiber, 0.50 NA

Item #	Wavelength Range	Hydroxyl Content	NA	Core Index @ 589.3 nm	Clad Index @ 589.3 nm	Core Diameter	Cladding Diameter	Coating Diameter	Core / Cladding	Coating	Stripping Tool
FP400URT	300 - 1200 nm	High OH	0.50	1.458434	1.3651	400 ± 8 µm	425 ± 10 µm	730 ± 30 µm	Pure Silica / Hard Polymer	Tefzel	T21S31
FP400ERT	400 - 2200 nm	Low OH		1.458965	1.3651						

Universal (2 Items) Items Ship from Bergkirchen, Germany

Item		Docs	Available	Price	Qty
FP400URT	0.50 NA, Ø400 µm Core Multimode Fiber, High OH		Today	4,03 € / Meter	1
FP400ERT	0.50 NA, Ø400 µm Core Multimode Fiber, Low OH		Today	5,95 € / Meter	1

We use third-party services that help us optimize our website to improve our user experience. We require your consent. By clicking Accept all cookies, you agree to the storage of cookies on your browser and the transmission of your data to third parties. You can find more information by clicking Cookies Settings, as well as under our Privacy Policy.

Ø600 µm Core Step-Index Multimode Fiber, 0.50 NA

Item #	Wavelength Range	Hydroxyl Content	NA	Core Index @ 589.3 nm	Clad Index @ 589.3 nm	Core Diameter	Cladding Diameter	Coating Diameter	Core / Cladding	Coating	Stripping Tool
FP600URT	300 - 1200 nm	High OH	0.50	1.458434	1.3651	600 ± 10 µm	630 ± 10 µm	1040 ± 30 µm	Pure Silica / Hard Polymer	Tefzel	T28S46
FP600ERT	400 - 2200 nm	Low OH		1.458965	1.3651						

Universal (2 Items) Items Ship from Bergkirchen, Germany

Item		Docs	Available	Price	Qty
FP600URT	0.50 NA, Ø600 µm Core Multimode Fiber, High OH		Today	8,84 € / Meter	1
FP600ERT	0.50 NA, Ø600 µm Core Multimode Fiber, Low OH		Today	11,49 € / Meter	1

We use third-party services that help us optimize our website to improve our user experience. We require your consent. By clicking Accept all cookies, you agree to the storage of cookies on your browser and the transmission of your data to third parties. You can find more information by clicking Cookies Settings, as well as under our Privacy Policy.

Ø1000 µm Core Step-Index Multimode Fiber, 0.50 NA

Item #	Wavelength Range	Hydroxyl Content	NA	Core Index @ 589.3 nm	Clad Index @ 589.3 nm	Core Diameter	Cladding Diameter	Coating Diameter	Core / Cladding	Coating	Stripping Tool
FP1000URT	300 - 1200 nm	High OH	0.50	1.458434	1.3651	1000 ± 15 µm	1035 ± 15 µm	1400 ± 50 µm	Pure Silica / Hard Polymer	Tefzel	M44S63
FP1000ERT	400 - 2200 nm	Low OH		1.458965	1.3651						

Universal (2 Items) Items Ship from Bergkirchen, Germany

Item		Docs	Available	Price	Qty
FP1000URT	0.50 NA, Ø1000 µm Core Multimode Fiber, High OH		Today	27,73 € / Meter	1
FP1000ERT	0.50 NA, Ø1000 µm Core Multimode Fiber, Low OH		Today	30,90 € / Meter	1

We use third-party services that help us optimize our website to improve our user experience. We require your consent. By clicking Accept all cookies, you agree to the storage of cookies on your browser and the transmission of your data to third parties. You can find more information by clicking Cookies Settings, as well as under our Privacy Policy.

Ø1500 µm Core Step-Index Multimode Fiber, 0.50 NA

Item #	Wavelength Range	Hydroxyl Content	NA	Core Index @ 589.3 nm	Clad Index @ 589.3 nm	Core Diameter	Cladding Diameter	Coating Diameter	Core / Cladding	Coating	Stripping Tool
FP1500URT	300 - 1200 nm	High OH	0.50	1.458434	1.3651	1500 ± 30 µm	1550 ± 31 µm	2000 ± 100 µm	Pure Silica / Hard Polymer	Tefzel	M63S86
FP1500ERT	400 - 2200 nm	Low OH		1.458965	1.3651						

Universal (2 Items) Items Ship from Bergkirchen, Germany

Item		Docs	Available	Price	Qty
FP1500URT	0.50 NA, Ø1500 µm Core Multimode Fiber, High OH		Today	90,62 € / Meter	1
FP1500ERT	0.50 NA, Ø1500 µm Core Multimode Fiber, Low OH		Today	118,93 € / Meter	1

We use third-party services that help us optimize our website to improve our user experience. We require your consent. By clicking Accept all cookies, you agree to the storage of cookies on your browser and the transmission of your data to third parties. You can find more information by clicking Cookies Settings, as well as under our Privacy Policy.